

INSTALLATION GUIDE

(Undermount Bath)

Required
Tools




ATTENTION

This product requires professional installation. Please provide your countertop fabricator with this information. Please observe all state and local building and plumbing codes.


TEMPLATE/GUIDE

The template provided is to be used as a guide for cutting. Due to the nominal dimensions and installation preference, some customization will be required. In some instances a template may not be included. If this is the case, the countertop fabricator will make a custom template based upon installation preference.

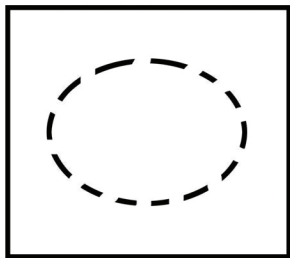

WARNING

Before installation, please inspect your product for any damage that may have occurred during shipping. If the product was damaged in the shipping process or your product needs to be returned for another reason, it must be in the original packaging. If the product is not returned with the original packaging you may not be eligible for a refund of the purchase price. Return fees may apply. Please contact your dealer for more information.

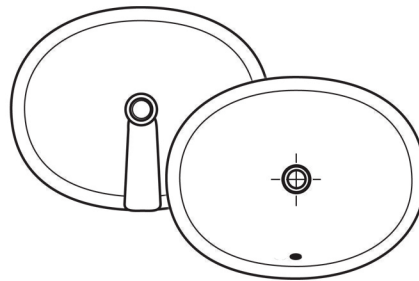

HOMEOWNERS

Please read before installation.

NEW INSTALLATION

When preparing for installation, it is recommended that you consult with your countertop fabricator as to your installation preference. **When preparing the template for installation, a 1/4" overhang is recommended to provide a clean transition from countertop to sink.** The overhang will hide any sign of the silicone adhesive.

REPLACEMENT

If replacing a pre-existing hole, make sure that the model you have chosen is larger than the existing hole. This will allow for any adjustments that might be needed for the installation process.

WHAT'S INCLUDED

VITREOUS CHINA BOWL
Guide/Template
Sink Hardware

WHAT'S NOT INCLUDED

Silicone Sealant/Adhesive


Step: 1

PREP

For proper adhesion, please make sure that the rim is clean, dry and dust free.

1. If replacing an existing sink, make sure that you have lined up the sink so that the overhang is equal all the way around. It is suggested to dry fit the sink and mark its location before installation.

2. Apply a continuous bead of silicone sealant / adhesive specifically designed for plumbing applications.

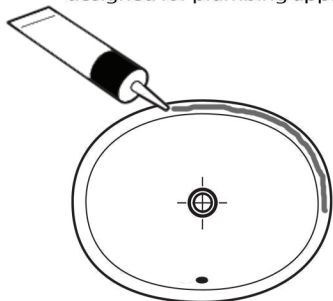


Step: 2

INSTALLATION

After you have confirmed that the sink lines up correctly within the existing hole cut-out, it is now time to install the sink.

1. Center the sink on the underside of the countertop using the marks you created during the dry fitting
2. Using the new hardware/existing hardware, loosely tighten the clips with the angled side facing down. After final adjustments have been made, tighten clips. **Do not over tighten**

3. Clean any excess sealant from the rim immediately and prepare for plumbing.

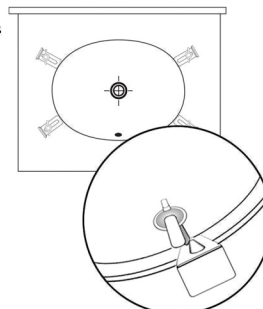

Step: 3

MAINTENANCE

To clean, please use common cleaners designed for bathroom sanitary-ware.

This product is made from vitreous china with a porcelain enamel glaze. The product is designed to handle normal everyday cleaning. It is not designed to withstand large objects dropped from height. This will potentially crack or shatter the bowl of the sink.

Please see the dealer warranty for more details